

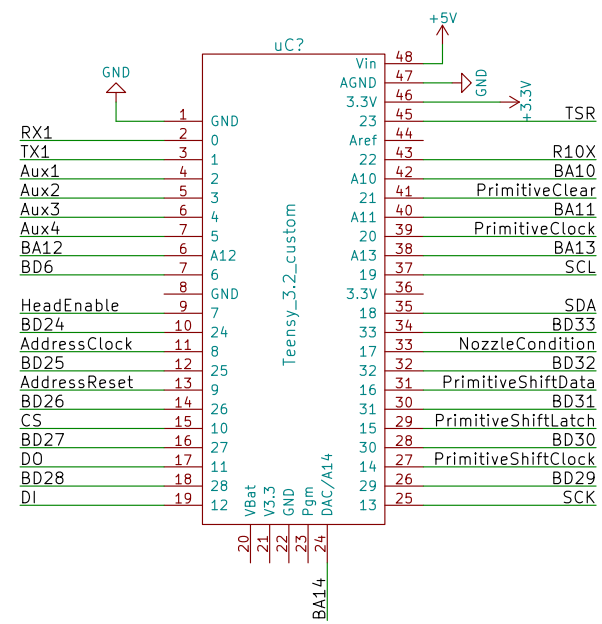





Controller

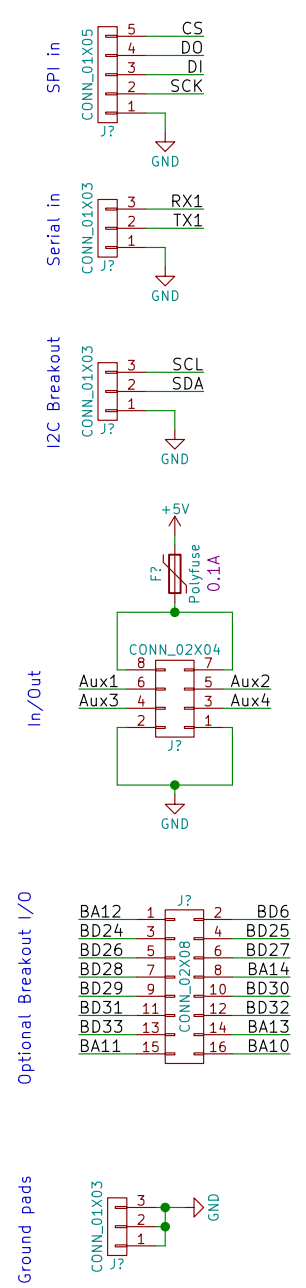

Primitive

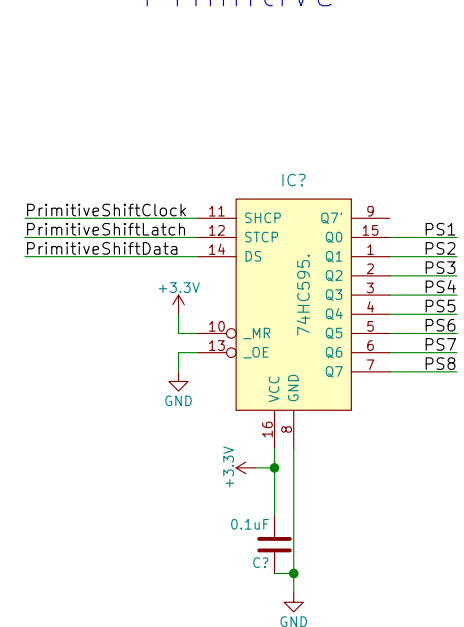

Check 595 shift order before final circuit

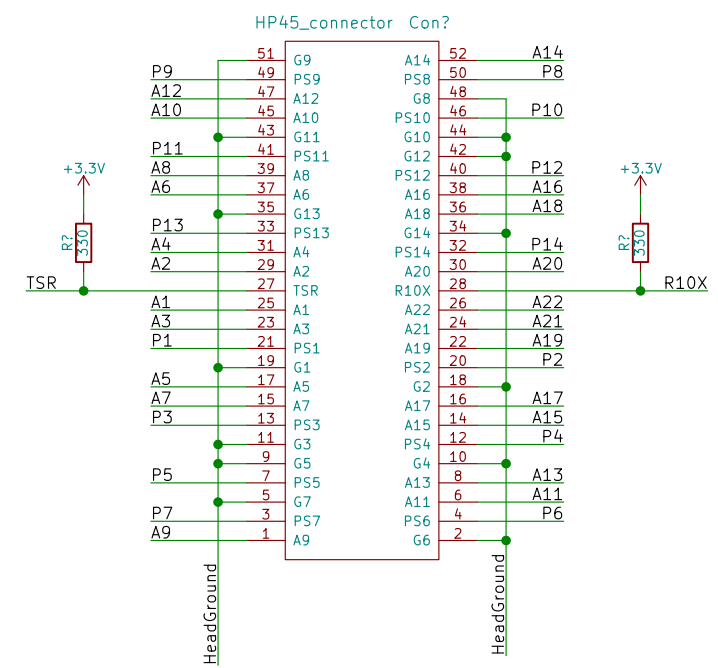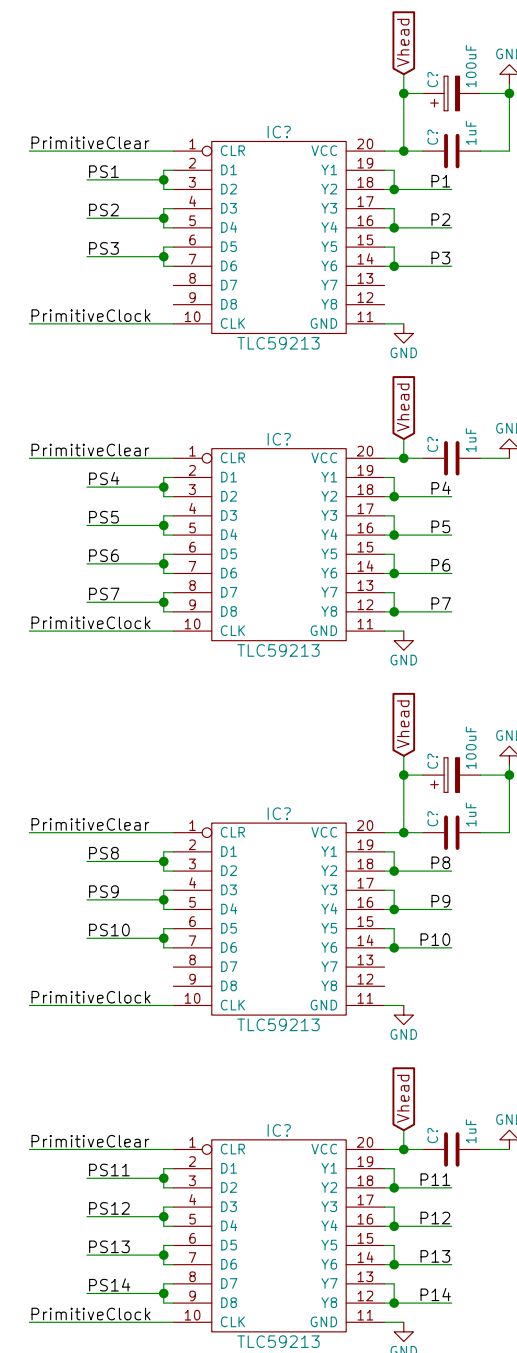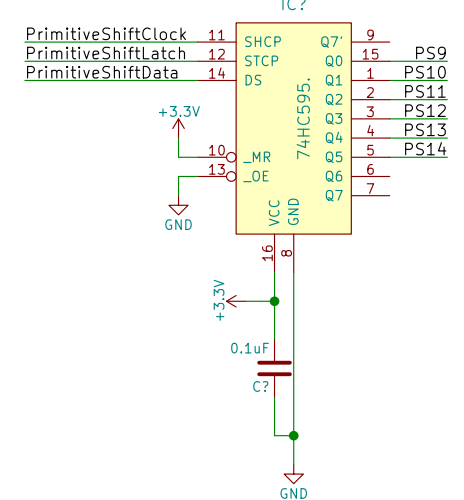

Address and primitive order will can be altered during PCB phase

Fiducial Front

Fiducial


Fiducial

Fiducial Back


Fiducial

Fiducial

Power supply

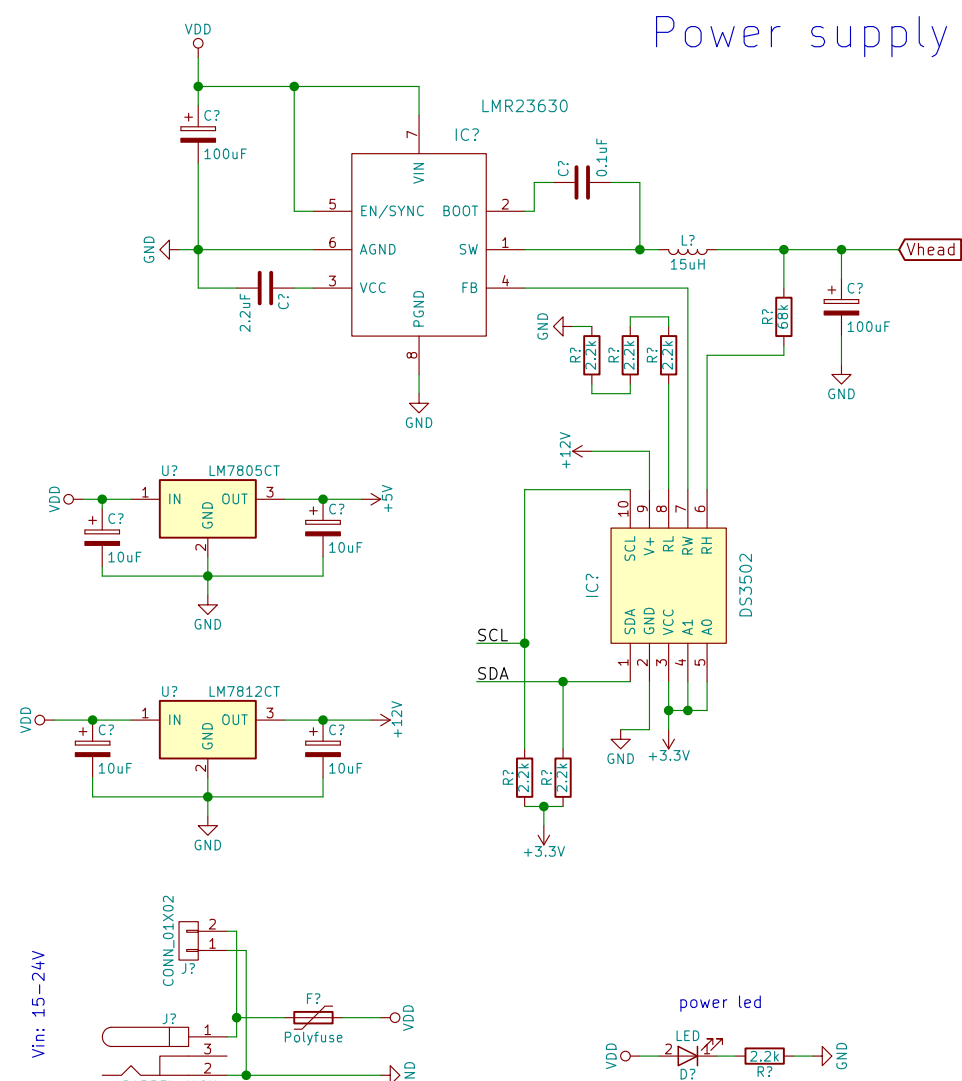

Address

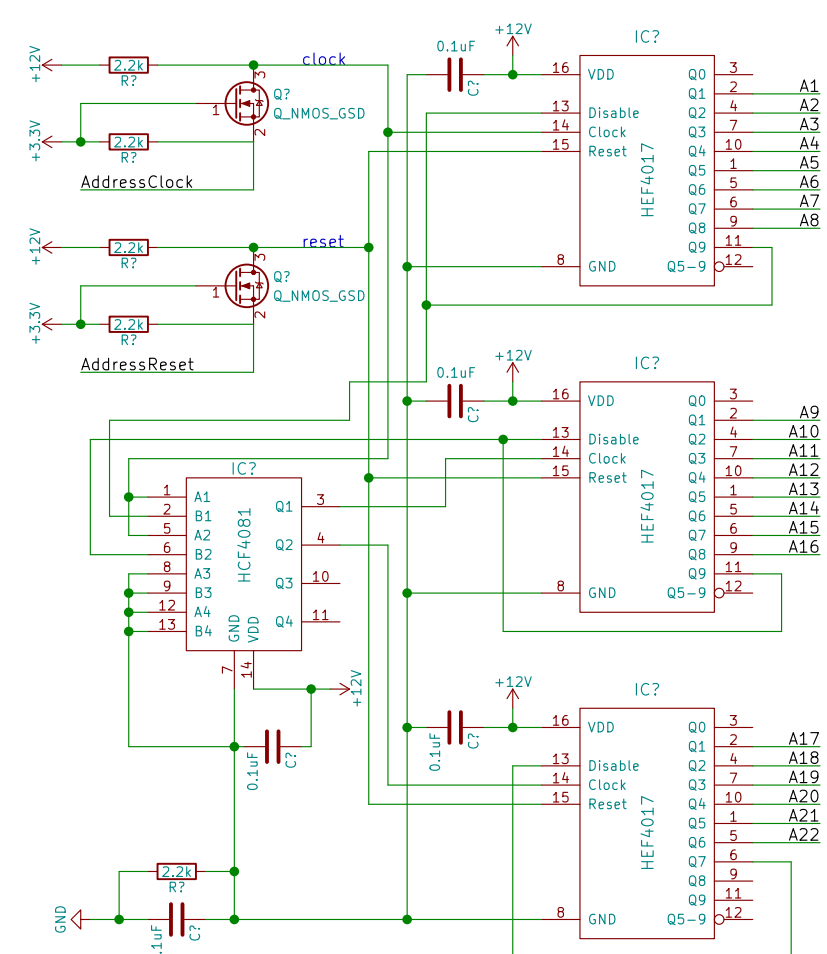

Check nozzle
+Head Enable

